CIS-256
June 2004

CURRENT INFORMATION SUMMARY

Opening Instructions for the KODAK Zoom One-Time-Use Camera

Wear eye protection when opening all cameras.

1 Wind Off

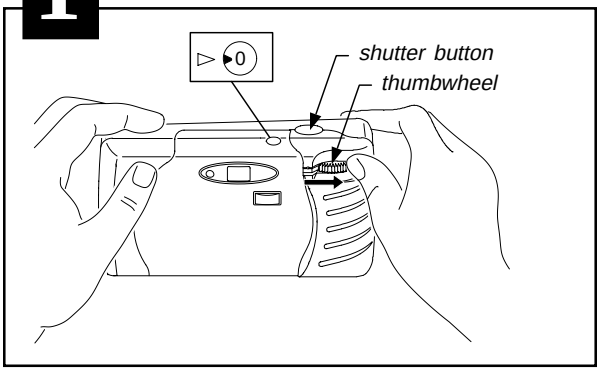

- Make sure "0" is aligned with the arrow in the frame-counter window.
- If the "0" is not aligned, grip the camera and cover the lens. Then press the *shutter button* and turn the *thumbwheel* (repeat these steps until the film is fully rewound).
  The film is fully rewound when the *thumbwheel* rotates freely and does not stop or lock.

2 Insert Tool

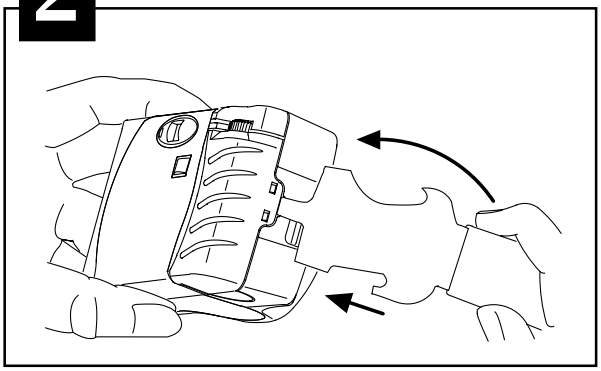

- Insert the special tool into the end slot.

3 Break Off Film Door

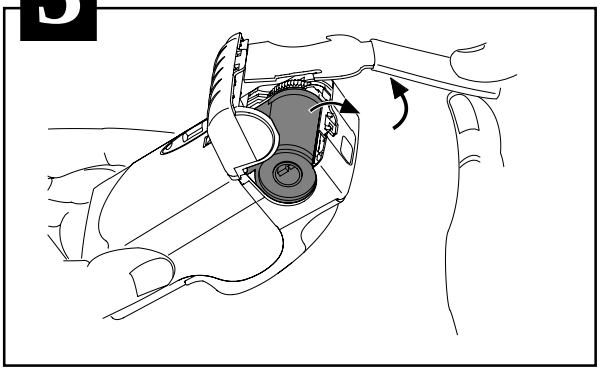

- Using the special tool, hold the camera firmly and pull upwards to break off the film door and to remove the film.

4 Remove Film

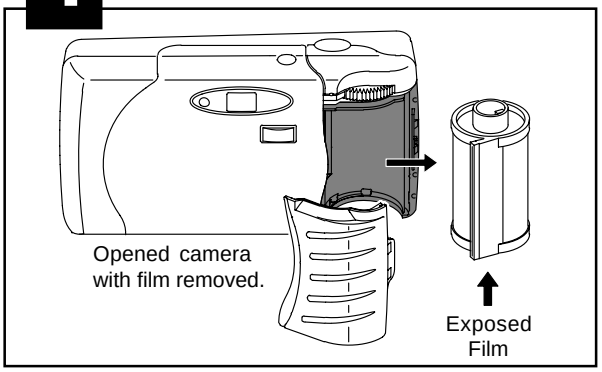

CAUTION: Before you attempt the opening tasks, make sure the tool is fully engaged with the camera body to prevent tool slippage.

5

- Place the used camera in the Kodak recycle bin.
- Visit our Web site at *http://www.kodak.com/go/kes* for details about Kodak's recycling program.
- Call Kodak's advertising distribution center at (800) 847-8755 to order a Kodak hand-opening tool.

CAUTION: This camera body contains a high-voltage capacitor and circuit board. To avoid electric shock, do not pry apart the front and back sections of the camera. Remove only the film from its respective compartment. If sections of the camera are separated, do not touch the circuit board.

© Eastman Kodak Company, 2004

Downloaded from www.Manualslib.com manuals search engine

Current Information Summaries provide information of limited or specific application. Responsibility for judging the timeliness and applicability of the information to a specific photographic use rests with the end user.

Consumer Imaging
EASTMAN KODAK COMPANY • ROCHESTER, NY 14650

Kodak is a trademark.

Downloaded from www.Manualslib.com manuals search engine